


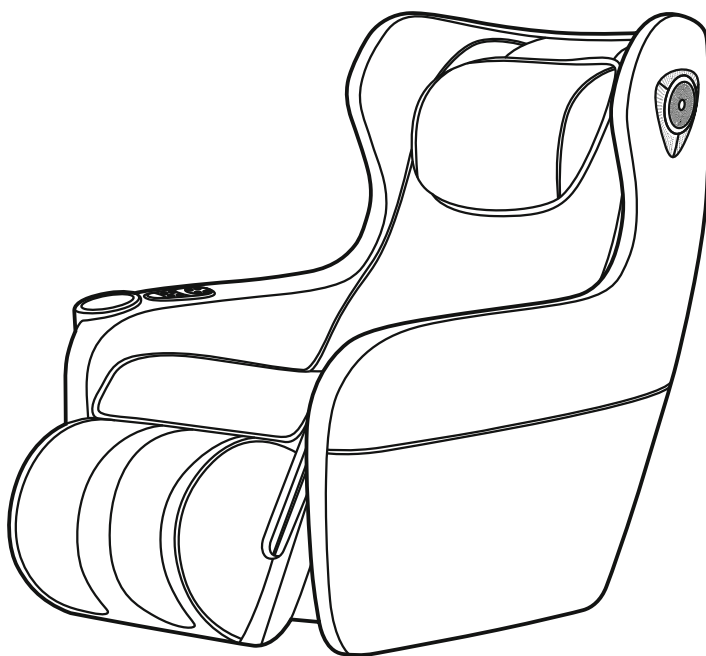

Massaggio Ricco



User manual

EN

Instrukcja obsługi

PL

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance	02
Name and function of components	04
Function	05
Method of usage:	06
Product specification	12

Safety and maintenance



1. Important Safety Warning.

- Don't allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't make the massage function too strong for avoiding Injury.

2. Environment for usage.

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being Supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.

4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water go inside this product to avoid electric shock or cause damage to this product.
- Don't damage the wires or change the circuit of this product.

Safety and maintenance

- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid a hazard.

5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.


6. Solution of ordinary malfunctions.

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product automatically power-off, it should be used again after half an hour's rest.




SAFETY WARNING

The chair is not too heavy, children climb on it or stand on it and jump is forbidden, or else it would be cause the chair over load one side and damage the chair or personal injuries.

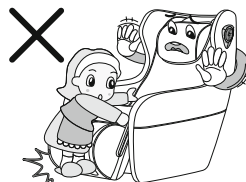

Name and function of components

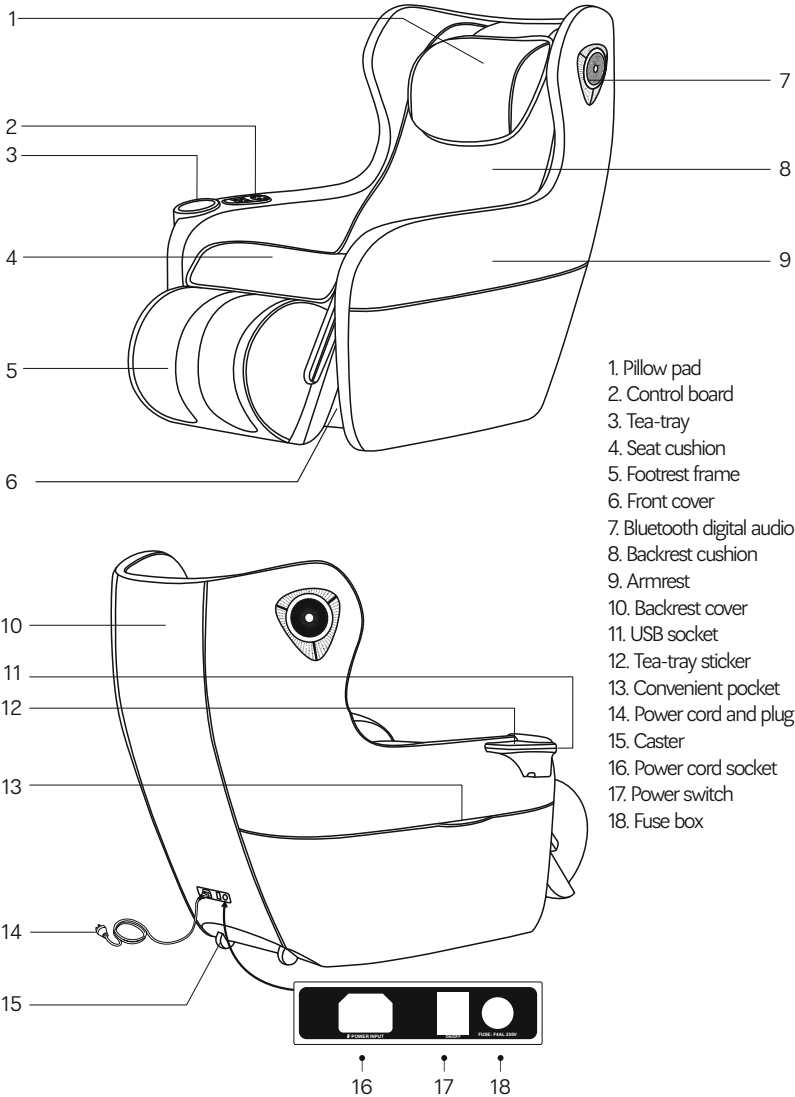


Function

- This product is designed with 2 sets massage mechanism hands. One set is specially designed for neck which can be adjusted up and down. The other set massage mechanism can move up and down, four-wheel drive and muted design.
- Set with 3 simulation massage methods: kneading, tapping, sync with kneading and tapping.
- Set with auto massage function: auto I, auto II, auto III and demo four auto modes.
- Set with massage mechanism hands can manually adjust position. Can positioning massage according to your needs. Have kneading and tapping function with 3 levels speed optional.
- Set with neck kneading massage independently: Have bidirectional kneading、one-way kneading optional. Can manually adjust neck & shoulder massage hands position.
- Set with air pressure massage function: Air pressure to the calf, 3 levels optional.
- Neck & shoulder heating function, use carbon fiber as infrared heating source.
- Mobile USB charger is designed in front of the tea-tray
- It is designed with timing display function.
- The footrest can be reversed 180° manually, can choose leg air bag massage according to user's demands.
- It can play music by connecting to Intelligent equipment through blue tooth
- There are two 3D digital audio on both sides of the shoulder place on the massage chair
- SL type super-long curved rail offers close massage from shoulder to thigh
- Massage mechanism can return back to original position once shutting the power off.

Method of usage

Note: See details on actual product buttons light.

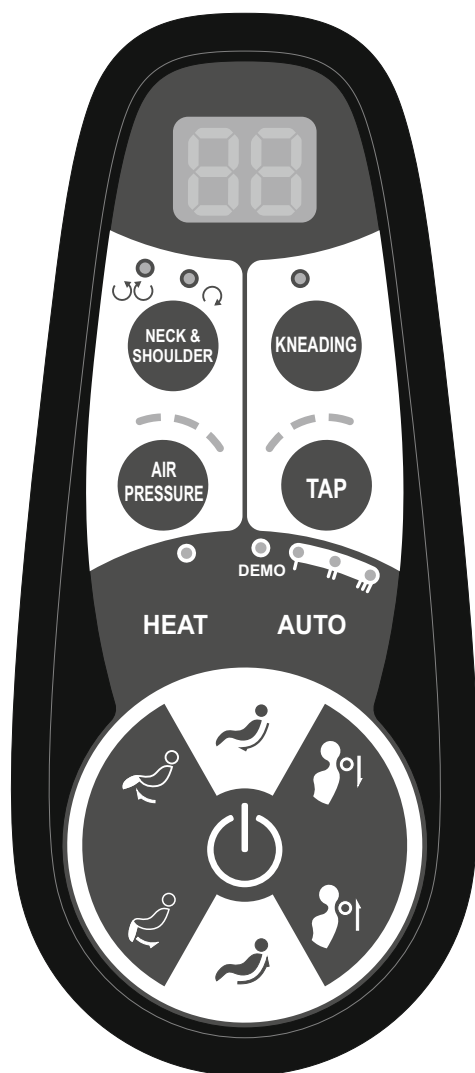

Method of usage

1. Switch on the machine



Connect method figure



Switch position of the machine

2. Start to massage.

- Press the red button to start massage.
- Enter to Auto I mode automatically. You can choose other modes.

A) Auto massage

Description	Button	Massage Features	Display
Auto massage		Auto I: Whole body massage, relax sore spot.	See the buttons light
		Auto I: Focus massage on neck and back.	See the buttons light
		Auto III: Focus massage on waist, buttocks and thigh.	See the buttons light
		Demo: Set with 5 minutes fast experience massage.	See the buttons light

B) Manual massage

Description	Button	Massage Features	Display
Function		Press this button to open or close the kneading massage function.	See the buttons light
		Press this button to open or close the tapping massage function. Three levels optional: weak, medium and strong.	See the buttons light
Massage position adjustment		Massage hands move up.	
		Massage hands move down.	

Method of usage

C) Neck & shoulder massage

Description	Button	Massage Features	Display
Function		Press this button to turn on bidirectional kneading, one-way kneading or turn off kneading massage.	See the buttons light
Neck & shoulder heating		Press this button to open or close heating function.	See the buttons light
Massage position adjustment		Neck & shoulder massage hands move down.	
		Neck & shoulder massage hands move up.	

D) Buttocks air pressure massage

Description	Button	Massage Features	Display
Air pressure		Air pressure massage on buttocks, 3 intensity adjustments: strong, medium and weak.	See the buttons light

E) Skeleton rack position adjustment:

Description	Button	Massage Features
Footrest recline button		Press this button continuously and the footrest will recline slowly, it will stop when release the button. When the footrest reaches highest point, it will stop reclining
Footrest decline button		Press this button continuously and the footrest will decline slowly, it will stop when release the button. When the footrest reaches lowest point, it will stop declining

3. The manual of bluetooth speaker

Operational Method:

- Enter the Smart Device Menu , Turn on "Setting" --Choose "Bluetooth" --Turn on "Blue tooth" -- Auto Searching new Blue tooth devices.
- The Smart Device will find the relevant Blue tooth model as (IMCM-0066) , and ask if connect , Choose "YES"or "CONFIRM".
- Enter the password "0000 or 1234", Then "CONFIRM" to fin ish the match.
- Open your music player on the smart device and choose the music to play .

Attention : Every Blue tooth model is subject to the actual searched model , as "IMCM-0066or IMCM-0061 or IMCM-0088...etc" , Every Bluetooth is unique .

Method of usage

4. Turn off power, stop massage

- In massage process, press red button, or the time is out, all the massage function will stop, and the massage hand restore.
- After the restoration, turn off the power

Figure (Turn off the power)



5. Tea-tray installation method

- Take the chair out of the packing carton (Figure 1)
- Take out the cup holder mounting plate from the accessory bag, align with the mounting screw hole reserved for the right armrest, then screw the 2 M4X10 screws into the lock with the cross screwdriver, and pull out the male head of USB line from the right armrest of the massage chair (Figure 2).

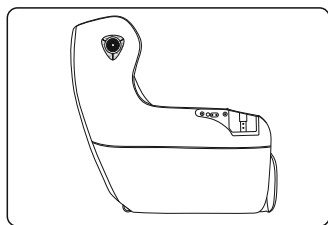


Figure 1

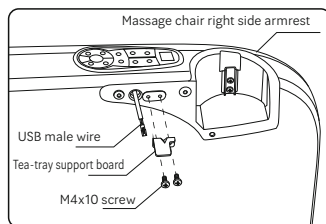


Figure 2

- Take out the upper cover of the tea-tray from the accessory bag, aim the slot of the upper cover to the limit board, prepare to insert (Figure 3)
- Press the upper assembly down hardly to insert it into the limit board and make sure it is installed in correct position (Figure 4)

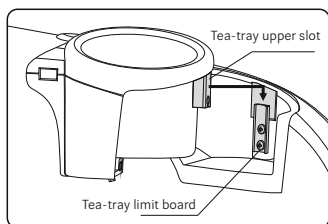


Figure 3

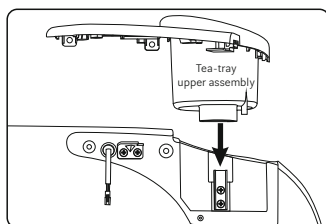


Figure 4

Method of usage

- After confirming the tea-tray upper assembly is installed well, twist 2 M4*10 screws with cross screwdriver and fix the tea-tray upper assembly on the right side of the armrest (Figure 5)
- Connect the USB male wire to the USB female wire which is on the tea-tray upper assembly (Figure 6)

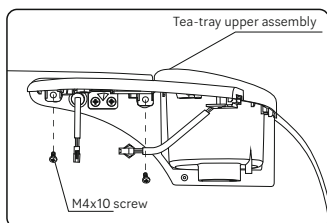


Figure 5

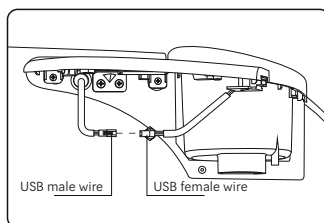


Figure 6

- Take out the tea-tray lower assembly from the accessory bag, aim the tea-tray lower assembly to the screw hole of the tea-tray upper assembly, twist 3 ST2.9*10 self tapping screw tightly and make sure both of them are installed well (Figure 7)
- When tea-tray is installed well, find out the M4*10 thread hole under the tea-tray, twist 1 M4*10 screw tightly by using the cross screwdriver in the accessory bag, installation finish. After installation is done, shake the tea-tray by hand to see if it is installed tightly (Figure 8)

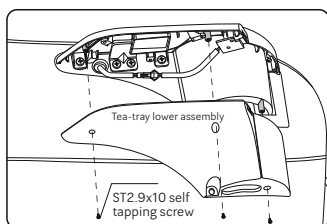


Figure 7


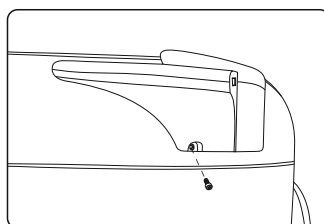


Figure 8

Method of usage

7. Floor protection

- Put the heavy massage chairs on the wood floor for a longtime may damage the floor, so please place a carpet or other object to avoid this damage

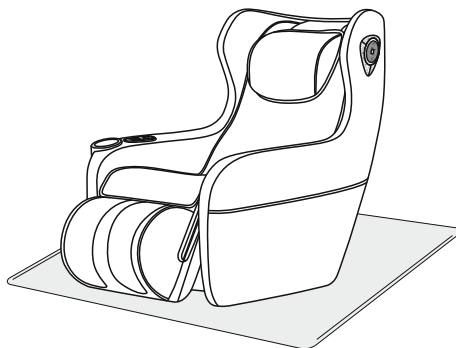


CAUTION

Do not move the chairs with its casters on bumpy ground or in a narrow space. Two people are required to lift the chair, and main lift point on the front cover board and back cover for moving.

8. Method of movement

While moving the massage chair, make sure that all power lines are far above the ground. Tilt backrest down to certain angle, with the gravity center resting on the casters (around 25 degrees). Push the chair forward or backward with your hands and finally resume the chair to the normal angle.

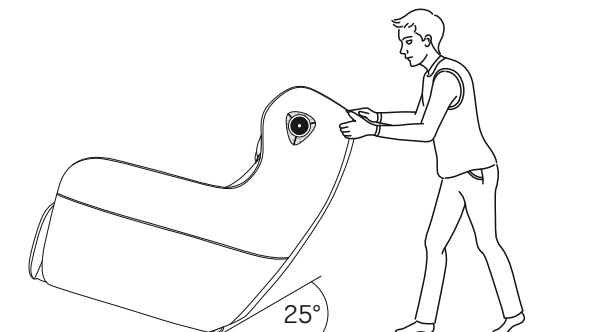

CAUTION

Make sure that the power off and take off the power line before moving

EN

Product specification

Model: Massaggio Ricco
Configure: 2
Name: Massage Chair
Rated voltage: 220-240V~ 50Hz/60Hz ☐
Rated power input: 60W
Noise: ≤ 55dB
Rated time: 20Min
Safety structure: Class I

Material introduction: PVC, PA, steel parts and electric & electron parts

MATERIAL	PU	LEATHER	CLOTH	WOOD

Bluetooth frequency range and power of 2.5 mW
Manufacturer's declaration: Product is compliant with Directive: 2014/53/EU.
Full text of declaration of conformity is available online
<https://restlords.com/en/declaration/>.

SAVE THESE INSTRUCTIONS


Dear user, you can contribute to environmental protection.
Be environmentally responsible and return your used equipment to the relevant collection point designated by your local administration. The materials used to manufacture the device may be valuable recyclable resources and, if disposed of incorrectly, can pose a risk to the natural environment.
Remember - do not dispose of the device together with your household waste.



EN



Massaggio Ricco

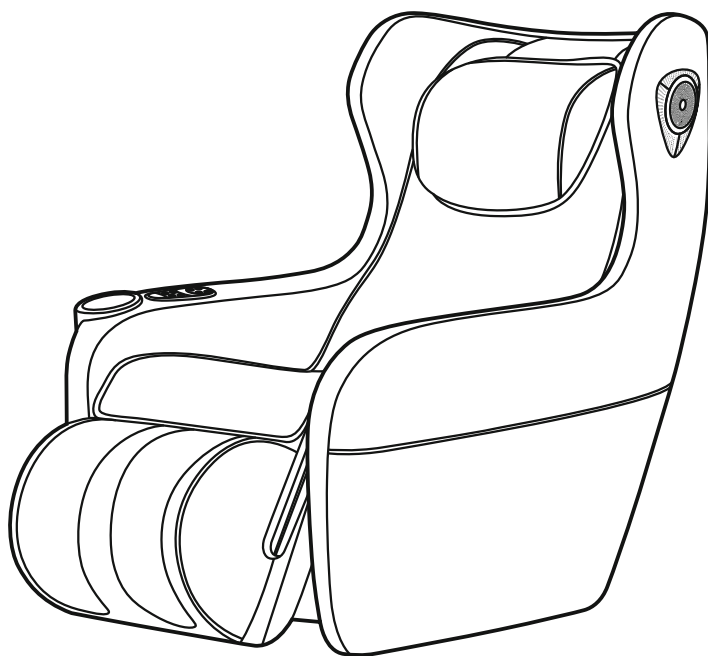

Dziękujemy za zakup naszego produktu. Prosimy o dokładne przeczytanie instrukcji obsługi, aby przed uruchomieniem fotela masującego poznać wszystkie jego funkcje i możliwości. W szczególności prosimy o zapoznanie się z przeciwwskazaniami oraz zasadami bezpiecznego użytkowania.

Uwaga: Sprzedawca zastrzega sobie prawa do zmiany i interpretacji projektu fotela masującego. Kolor zilustrowany w instrukcji obsługi nie reprezentuje aktualnej kolorystyki fotela masującego.

Spis treści

Bezpieczeństwo i konserwacja	16
Schemat fotela	18
Funkcje	19
Użytkowanie	20
Specyfikacja produktu	26

Bezpieczeństwo i konserwacja



1. Ważne uwagi co do bezpieczeństwa

- Nie pozwalaj dzieciom dotykać ruchomych części tego fotela masującego.
- Używaj dobrze uziemionego zasilacza odpowiedniego dla tego produktu.
- Wyciągnij wtyczkę po użyciu lub przed czyszczeniem, aby uniknąć obrażeń lub uszkodzenia produktu.
- Obsługuj fotel masujący zgodnie z instrukcją obsługi.
- Nie używaj akcesoriów, które nie są zalecane.
- Nie używaj fotela masującego na zewnątrz.
- Przed rozpoczęciem użytkowania przeczytaj uważnie niniejszą instrukcję obsługi.
- Wszelkie inne zastosowania, które nie są wymienione w niniejszej instrukcji, są zabronione.
- Zaleca się każdorazowo 20 minut użytkowania.
- Nie używaj fotela, jeśli skóra lub pokrywa jest zepsuta lub uszkodzona.
- Nie używaj go, jeśli otwór chłodnicy jest zakryty lub zablokowany.
- Nie upuszczaj niczego nad fotelem masującym.
- Nie zasypiaj podczas korzystania z fotela masującego.
- Nie używaj fotela masującego, jeśli jesteś nietrzeźwy lub źle się czujesz.
- Nie korzystaj z masażu w ciągu godziny po posiłku.
- Nie ustawiaj dużej siły masażu w pierwszych etapach korzystania z fotela masującego.

2. Środowisko

- Nie używaj fotela masującego w pomieszczeniach o dużej temperaturze i wilgoci powietrza.
- Nie używaj fotela masującego od razu po gwałtownych zmianach temperatury.
- Nie używaj fotela masującego w miejscach silnie zakurzonych.
- Nie używaj fotela masującego w miejscach, gdzie nie ma wystarczającej przestrzeni, bądź cyrkulacji powietrza.

3. Przeciwwskazania do korzystania z fotela masującego.

- Osoby cierpiące na osteoporozę nie powinny korzystać z fotela masującego.
- Osoby cierpiące na choroby serca lub noszące elektroniczny sprzęt medyczny, taki jak rozrusznik serca, nie powinny korzystać z fotela masującego.
- Osoby z gorączką nie powinny korzystać z fotela masującego.
- Kobiety w ciąży lub kobiety w okresie menstruacyjnym nie powinny korzystać z tego fotela masującego.
- Osoby, które doznały obrażeń lub chorób skóry, nie powinny korzystać z tego produktu.
- Dzieci poniżej 14 roku życia lub osoby niezdolne umysłowo bez nadzoru nie mogą korzystać z tego urządzenia.
- Osoby, którym lekarz zalecił odpoczynek lub które źle się czują, nie powinny korzystać z tego produktu.
- Osoby, których ciała są mokre, nie mogą używać tego produktu.
- Urządzenie ma podgrzewaną powierzchnię. Osoby niewrażliwe na ciepło muszą zachować ostrożność podczas korzystania z urządzenia.

4. Bezpieczeństwo

- Sprawdź, czy napięcie jest zgodne ze specyfikacją tego produktu.
- Nie używaj mokrej ręki do wyciągania wtyczki.

Bezpieczeństwo i konserwacja

- Nie wolno dopuścić do przedostania się wody do wnętrza tego produktu, aby uniknąć porażenia prądem lub uszkodzenia produktu.
- Uważaj na uszkodzenie przewodów.
- Nie używaj mokrej ściereczki do czyszczenia części elektrycznych, takich jak przełącznik i wtyczka.
- Nie zbliżaj się do produktu podczas odcięcia zasilania, aby uniknąć obrażeń, jeśli nagle nastąpi powrót zasilania.
- Nie używaj fotela masującego, gdy działa nieprawidłowo, natychmiast skontaktuj się ze sprzedawcą.
- Przerwij korzystanie z fotela masującego, kiedy poczujesz się źle, skonsultuj się z lekarzem.
- To urządzenie nie jest przeznaczone do użytku przez osoby (w tym dzieci) o ograniczonych zdolnościach fizycznych, sensorycznych lub umysłowych, lub bez doświadczenia i wiedzy, chyba że będą one nadzorowane lub poinstruowane w zakresie użytkowania urządzenia.
- Dzieci powinny znajdować się pod nadzorem, aby upewnić się, że nie bawią się urządzeniem.
- Jeśli przewód zasilający jest uszkodzony, musi zostać wymieniony przez producenta/serwisanta.

5. Konserwacja

- Wyłącz zasilanie przed czyszczeniem, w celu uniknięcia zranienia, bądź też uszkodzenia fotela masującego.
- Czyść fotel masujący za pomocą suchej szmatki lub specjalnych środków do tego przeznaczonych, nie używaj rozcieńacza, benzyny ani alkoholu.
- Jeżeli fotel masujący miałby być przez długi czas nieużywany, zwiń kabel, osłoń go i umieść w suchym pomieszczeniu.
- Nie przesuвай fotela masującego po nierównej powierzchni.
- Pamiętaj o wyłączeniu fotela masującego po zakończeniu korzystania.
- Fotel masujący powinien być serwisowany wyłącznie przez serwis sprzedawcy.


6. Rozwiązania zwykłych usterek

- Naturalnym jest odgłos pracujących silowników w momencie używania fotela masującego.
- Jeżeli panel sterujący nie działa poprawnie, sprawdź, czy fotel masujący jest podłączony poprawnie oraz czy włącznik jest w pozycji „ON”.
- Jeżeli fotel masujący używany jest bez przerwy przez długi czas, to w momencie osiągnięcia wysokiej temperatury nastąpi automatyczne wyłączenie. Należy odczekać, co najmniej pół godziny, aby móc dalej korzystać z fotela masującego.




OSTRZEŻENIE

Ze względu na wagę fotela masującego dzieci nie powinny po nim skakać bądź wspinać się - fotel może się przechylić, a w następstwie: zniszczyć bądź doprowadzić do uszczerbku na zdrowiu dziecka.

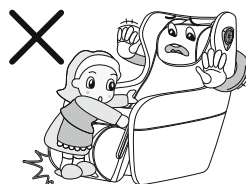

Schemat fotela masującego

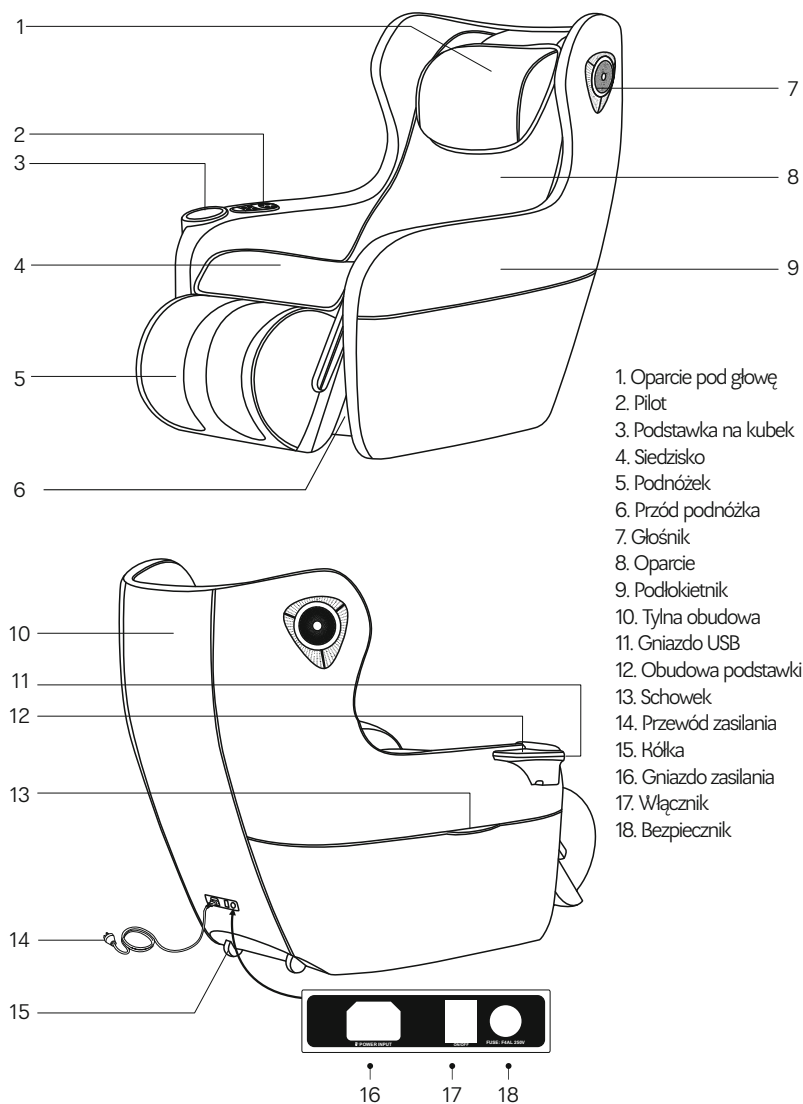


Funkcje i działanie

- Wyposażony w 2 zestawy ramion mechanicznych. Pierwszy odpowiada za masaż szyi i ramion, drugi, z zestawem 4 kul masujących, masuje plecy.
- 3 techniki masażu: ugniatanie, oklepywanie oraz zsynchronizowanie ugniatania z oklepywaniem.
- 4 programy automatyczne: Auto I, Auto II, Auto III i Demo.
- Możliwość ręcznej regulacji pozycji ramion masujących zgodnie z potrzebami użytkownika. Funkcja oklepywania posiada 3 opcjonalne poziomy szybkości.
- Zestaw masujący szyję działa niezależnie: posiada funkcję ugniatania działającą w dwóch kierunkach lub opcjonalnie w jednym. Możliwość ręcznej regulacji pozycji ramion masujących.
- Masaż poduszkami powietrznymi: 3 poziomy regulacji masażu łydek.
- Funkcja ogrzewania promieniami podczerwonymi szyi i ramion.
- Ładowarka przenośna USB znajduje się przed podstawką na kubek.
- Model zaprojektowany z funkcją wyświetlania czasu.
- Podnóżek może być wysunięty ręcznie pod kątem 180°, możliwość wyboru masażu nóg za pomocą poduszek powietrznych zgodnie z potrzebami użytkownika.
- Możliwość odtwarzania muzyki poprzez połączenie z urządzeniem za pomocą funkcji Bluetooth.
- Muzyka jest odtwarzana z dwóch głośników umieszczonych po obu stronach fotela masującego.
- Ramiona masujące poruszają się w technologii SL-shape, która umożliwia masaż od szyi po uda.
- Po wyłączeniu fotela masującego ramiona masujące wracają do pozycji wyjściowej.

Sposób użytkowania

Uwaga: Podświetlane diody pokazują aktualną pracę fotela masującego.

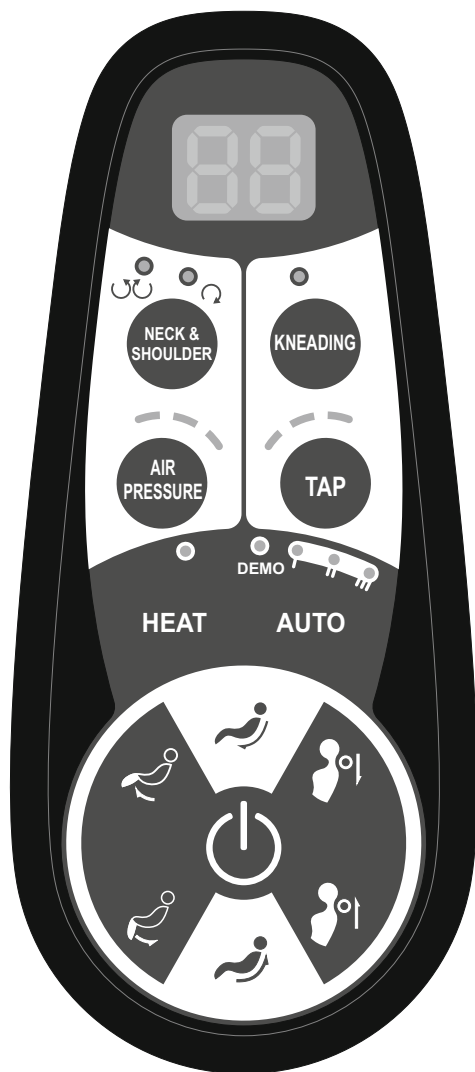

Sposób użytkowania

1. Włącz fotel, przełączając włącznik w pozycję ON



2. Start masażu

- Wciśnij czerwony przycisk, aby rozpocząć masaż.
- Po uruchomieniu fotel automatycznie rozpoczyna masaż w programie automatycznym Auto I. W dowolnym momencie możesz wybrać inny program automatyczny lub technikę masażu.

A) Programy automatyczne

Funkcja	Przycisk	Opis	Wyświetlacz
Programy automatyczne		Auto I: masaż całego ciała, masaż rozluźniający obolałe mięśnie	Lampka programu włączona
		Auto II: masaż skoncentrowany na szyi i plecach	Lampka programu włączona
		Auto III: masaż skoncentrowany na talii, pośladkach i udach	Lampka programu włączona
		Demo: krótki 5 minutowy masaż	Lampka programu włączona

B) Techniki masażu

Funkcja	Przycisk	Opis	Wyświetlacz
Techniki masażu		Naciśnij ten przycisk, by uruchomić lub wyłączyć tryb ugniatania.	Lampka programu włączona
		Naciśnij ten przycisk, by uruchomić lub wyłączyć tryb oklepywania. Możliwość regulacji w trzech poziomach: słaby, średni i mocny.	Lampka programu włączona
Pozycja mechanizmu masującego		Przesuwa mechanizm masujący w górę	
		Przesuwa mechanizm masujący w dół	

Sposób użytkowania

C) Masaż szyi i ramion

Funkcja	Przycisk	Opis	Wyświetlacz
Masaż szyi i ramion		Naciśnij ten przycisk, by uruchomić ugniatanie dwukierunkowe, jednokierunkowe lub wyłączyć funkcję całkowicie.	Lampka programu włączona
Ogrzewanie szyi i ramion		Naciśnij ten przycisk, by włączyć lub wyłączyć funkcję ogrzewania.	Lampka programu włączona
Pozycja mechanizmu masującego		Przesuwa mechanizm masujący w dół	
		Przesuwa mechanizm masujący w górę	

D) Masaż za pomocą poduszek powietrznych

Funkcja	Przycisk	Opis	Wyświetlacz
Poduszki powietrzne		Masaż poduszkami powietrznymi pośladków. Możliwość regulacji w trzech poziomach: mocny, średni i słaby.	Lampka programu włączona

E) Regulacja pozycji położenia podnóżka

Funkcja	Przycisk	Opis
Przycisk odchylania podnóżka		Naciśnij i przytrzymaj ten przycisk, by powoli podnieść podnóżek. Po puszczeniu przycisku podnóżek się zatrzyma. Podnóżek można zatrzymać w dowolnej pozycji.
Przycisk opuszczenia podnóżka		Naciśnij i przytrzymaj ten przycisk, by powoli opuścić podnóżek. Po puszczeniu przycisku podnóżek się zatrzyma. Podnóżek można zatrzymać w dowolnej pozycji.

3. Włączanie muzyki przy pomocy modułu Bluetooth

- Uruchom moduł Bluetooth w swoim urządzeniu, wyszukaj fotel masujący (nazwa zaczynająca się na IMCM-....) i nawiąż połączenie. Następnie w swoim urządzeniu otwórz aplikację odpowiedzialną za odtwarzanie muzyki i włącz wybrany utwór.
- Czasami podczas tego procesu może być wymagane hasło ('0000' lub '1234').

Sposób użytkowania


4. Wyłączanie zasilania, zatrzymywanie masażu

- I. Podczas trwania masażu wciśnij czerwony przycisk lub poczekaj aż czas trwania masażu się skończy. Wszystkie funkcje zostaną zatrzymane, a ramiona masujące wrócą do pozycji wyjściowej.
- II. Gdy ramiona masujące wrócą do pozycji wyjściowej, można wyłączyć zasilanie.




5. Wyłączanie zasilania, zatrzymywanie masażu

- I. Wyjmij fotel masujący z kartonowego opakowania. (Rysunek 1)
- II. Wyjmij płytkę montażową uchwytu na kubek z torby na akcesoria, wyrównaj z otworem na śrubę montażową zarezerwowanym dla prawego podłokietnika, następnie wkręć 2 śruby M4X10 w blokadę śrubokrętem krzyżowym i wyciągnij gwint zewnętrzny przewodu USB z prawego podłokietnika fotela do masażu (Rysunek 2).

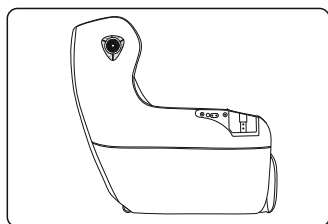


Rysunek 1

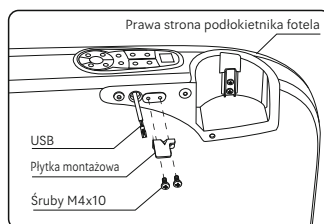


Rysunek 2

- III. Wyjmij górną pokrywę podstawki na kubek z torby na akcesoria, skieruj szczelinę górnej pokrywy na płytę graniczną, przygotuj się do włożenia. (Rysunek 3)
- IV. Lekko naciśnij górną część, aby wcisnąć ją w płytę graniczną i upewnij się, że została zainstalowana właściwie. (Rysunek 4)

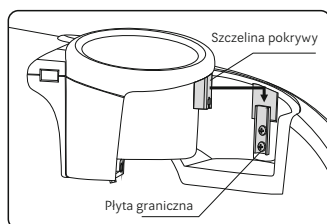


Rysunek 3

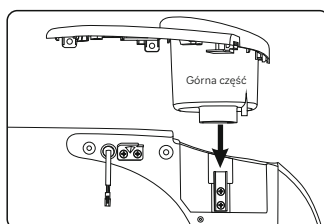


Rysunek 4

Sposób użytkowania

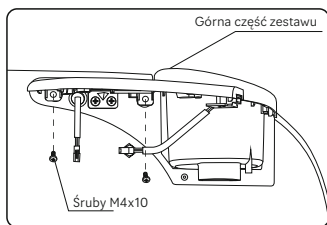


Rysunek 5

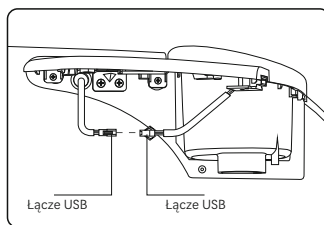


Rysunek 6

- V. Połącz zewnętrzny przewód USB z wewnętrznym, który znajduje się w górnej części podstawki. (Rysunek 6)
- VI. Wyjmij dolną część podstawki na kubek z torby na akcesoria, przymierz ją do otworu na śrubę w górnej części podstawki na kubek, mocno wkręć 3 śruby samogwintujące ST2.9 * 10 i upewnij się, że obie części są prawidłowo zainstalowane (Rysunek 7)
- VII. Jeżeli podstawka została prawidłowo zamontowana, odszukaj znajdujący się pod nią otwór gwintowany M4 * 10, mocno dokręć śrubkę M4 * 10 za pomocą śrubokręta krzyżowego z torby z akcesoriami i skończ montowanie. Po zakończeniu montażu, sprawdź, czy podstawka na kubek została ściśle zamontowana. (Rysunek 8)

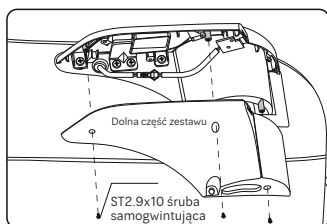

Rysunek 7

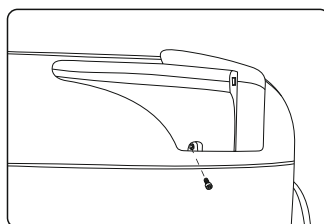


Rysunek 8

Sposób użytkowania

7. Ochrona podłoża

- Używanie fotela masującego na drewnianej podłodze może ją zniszczyć. Zaleca się stosowanie dywaników bądź innych podstaw, żeby zapobiec uszkodzeniom podłogi.

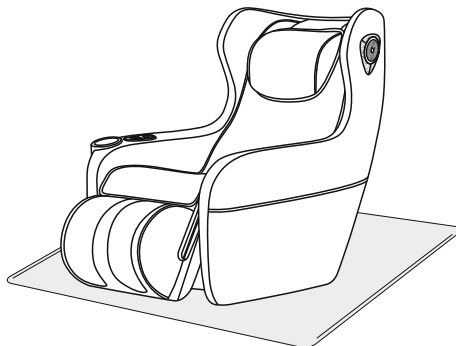


UWAGA

Nie przemieszczaj fotela masującego na kółkach po nierównej powierzchni lub w wąskich przestrzeniach. Do podniesienia fotela potrzeba dwóch osób: jedna trzymająca z przodu, druga z tyłu.

8. Przesławianie fotela

- Przesławianie możliwe jest za pomocą tylnych kółek (używaj tak jak na rysunku poniżej).

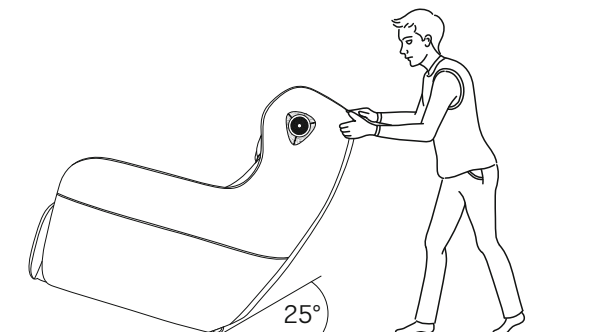

UWAGA

Upewnij się, że podczas przenoszenia zasilanie jest odłączone

Specyfikacja fotela masującego

Model: Massaggio Ricco

Wersja: 2

Nazwa: Fotel masujący

Napięcie 220-240V~ 50Hz/60Hz ☐

Pobór mocy: 60W

Głośność: ≤ 55dB

Rekomendowany czas pracy: 20Min

Klasa bezpieczeństwa: Klasa I

Zastosowane materiały: PVC, PA, części stalowe, elektryczne i elektroniczne

MATERIAŁ	PU	SKÓRA	TRANINA	DREWNO

Zakres częstotliwości w standardzie Bluetooth i mocy 2,5 mW

Oświadczenie Producenta: Produkt zgodny z dyrektywą: 2014/53/UE.

Pełna deklaracja zgodności dostępna jest na stronie internetowej

<http://restlords.com/deklaracja>.

ZACHOWAJ INSTRUKCJE

Drogi użytkowniku, możesz przyczynić się do ochrony środowiska.
Bądź ekologicznie odpowiedzialny i zużyte urządzenie oddaj do odpowiedniego punktu składowania wyznaczonego przez lokalną administrację.
Użyte do produkcji urządzenia materiały mogą być cennym surowcem wtórnym, a gdy są niewłaściwie utylizowane mogą być niebezpieczne dla środowiska.
Pamiętaj - nie wyrzucaj urządzenia wraz z odpadami komunalnymi.

